


# Fender Beading Kit – Notchback

Part No. 315898715A

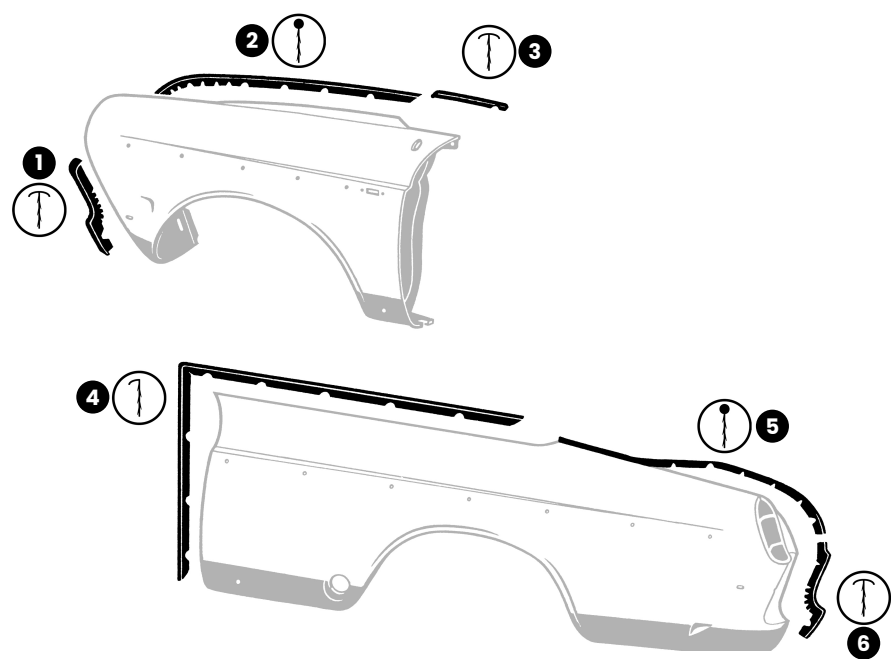

## Installation

| No. | Qty | Length | Profile              | Where it goes                                                                                  |
|-----|-----|--------|----------------------|------------------------------------------------------------------------------------------------|
| 1   | 2   | 20"    | T-beading            | Front apron.                                                                                   |
| 2   | 2   | 45"    | Round (bug beading)  | From the top of the front apron to the front cowl, parallel to the outer edges of the hood.    |
| 3   | 2   | 12"    | T-beading            | Front fender top, where it curves from the door to the front of the hood.                      |
| 4   | 2   | 73"    | L-beading (¼ circle) | Rear fender, from the edge near the tail light all the way to the bottom of the door jamb.     |
| 5   | 2   | 31"    | Round (bug beading)  | From the top of the rear apron to the rear cowl, parallel to the outer edges of the rear hood. |
| 6   | 2   | 12"    | T-beading            | Rear apron.                                                                                    |

## Before you start

- Check that your kit is complete: use the diagram and table above to identify all 12 pieces in 3 profiles.
- Trim the beading around each fender bolt.
- Pie-cut the beading where it needs to follow a curve, such as on the front and rear aprons and along the rear fender edge at the door jamb.
- For a sharp turn, cut a V out of the inside edge at the bend, as shown at right.

