


Fender Beading Kit – Squareback & Fastback

Part No. 361898715A

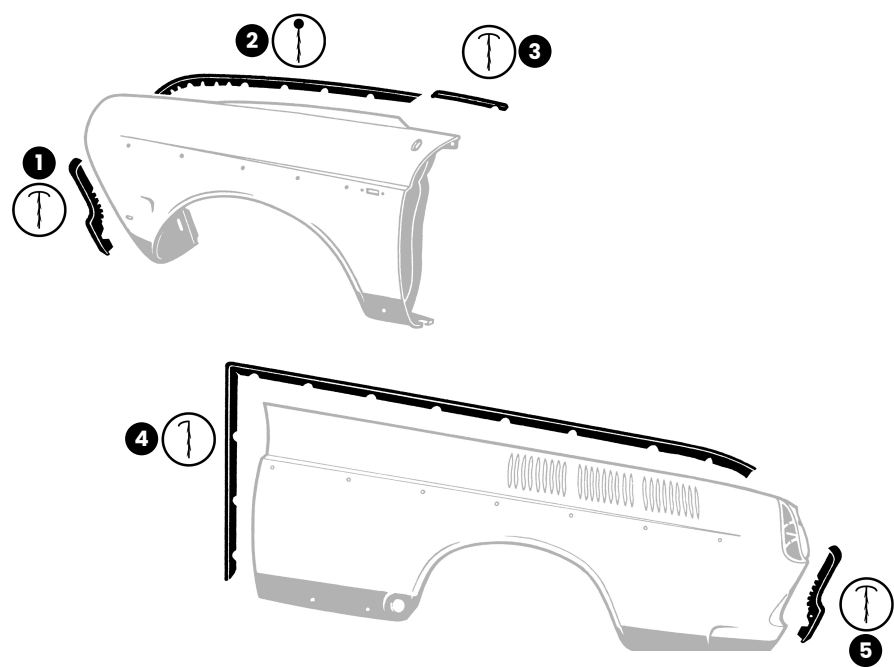

Installation

No.	Qty	Length	Profile	Where it goes
1	2	20"	T-beading	Front apron.
2	2	45"	Round (bug beading)	From the top of the front apron to the front cowl, parallel to the outer edges of the hood.
3	2	12"	T-beading	Front fender top, where it curves from the door to the front of the hood.
4	2	93"	L-beading (¼ circle)	Rear fender, from the edge near the tail light all the way to the bottom of the door jamb.
5	2	12"	T-beading	Rear apron.

Before you start

- Check that your kit is complete: use the diagram and table above to identify all 10 pieces in 3 profiles.
- Trim the beading around each fender bolt.
- Pie-cut the beading where it needs to follow a curve, such as on the front and rear aprons and along the rear fender edge at the door jamb.
- For a sharp turn, cut a V out of the inside edge at the bend, as shown at right.

